


QUICK START GUIDE

**MODEM:
HITRON CDA3-20**

**MESH WI-FI ROUTER:
TP-LINK DECO M4**

1 CHECK THE BOX CONTENTS
Look in the box and make sure you have the following:

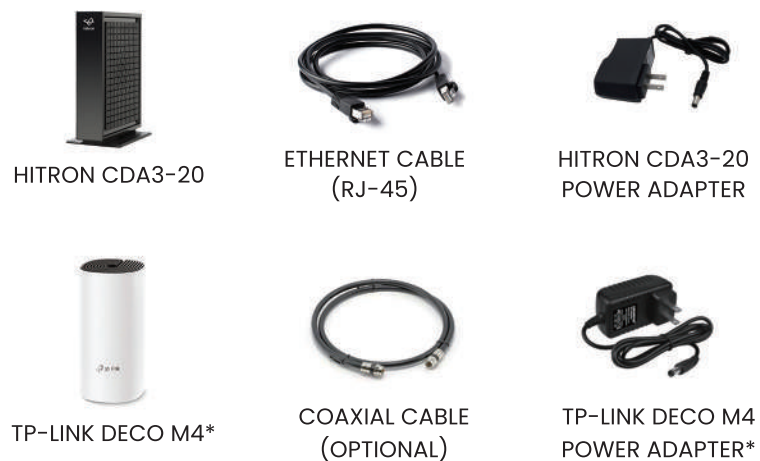

*Quantity depends on user choice

2 CONNECT THE MODEM TO THE CABLE OUTLET

Connect the coaxial cable from the modem to the cable outlet as indicated below.




3 CONNECT THE POWER ADAPTER TO THE MODEM

Connect the power adapter DIRECTLY from the wall outlet to the modem as indicated below.




4 CONNECT THE MODEM TO THE ROUTER

Connect the ethernet cable from the modem's LAN port to the router's port as indicated below.

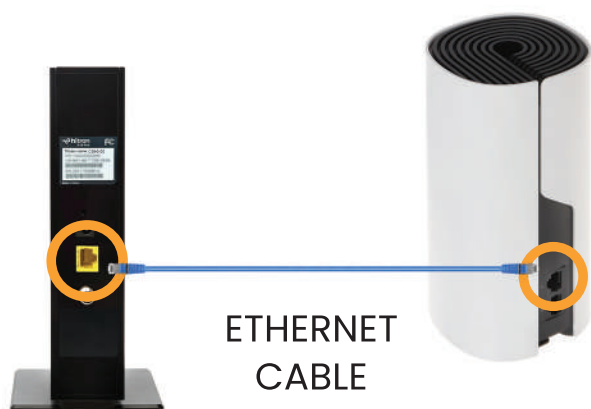

5 CONNECT THE POWER ADAPTER TO THE ROUTER

Connect the power adapter DIRECTLY from the wall outlet to the router as indicated below.

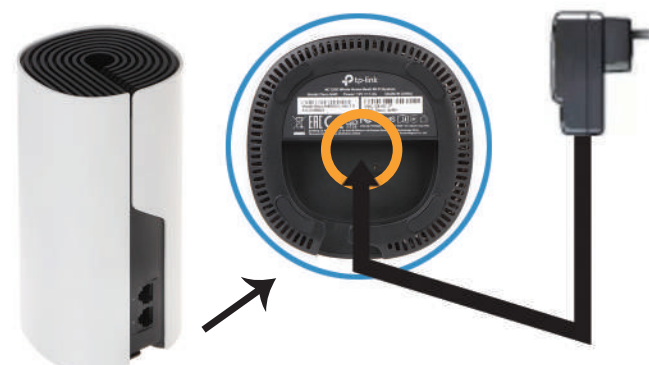

6 DOWNLOAD AND INSTALL THE DECO APP

Download the TP-Link Deco app for iOS or Android. The app will walk you through the setup.



Need Help?

For answers to frequently asked questions (FAQs) and technical support, please go to

- <https://www.tp-link.com>
- Navigate to Deco's support page
- [the Deco app](#)

Swipe right at the main page and select [Help](#) from the menu.

To download the full manual, please visit:

Hitron CDA3-20

<https://www.carrytel.ca/download/hitroncda3-20.pdf>

TP-LINK DECO M4

<https://www.carrytel.ca/download/decom4.pdf>

If you need help to set up the equipment, please contact us at 647-560-4448 and go to Line 2 for Technical Support