

## QUICK START GUIDE

MODEM: HITRON CODA-45

&

MESH WI-FI ROUTER: TP-LINK DECO X20

# 1

## CHECK THE BOX CONTENTS

Look in the box and make sure you have the following:



HITRON CODA-45



ETHERNET CABLE  
(RJ-45)



HITRON CODA-45  
POWER ADAPTER



TP-LINK DECO X20\*



COAXIAL CABLE  
(OPTIONAL)




TP-LINK DECO X20  
POWER ADAPTER\*

\*Quantity depends on user choice

# 2

## CONNECT THE MODEM TO THE CABLE OUTLET

Connect the coaxial cable from the modem to the cable outlet as indicated below.

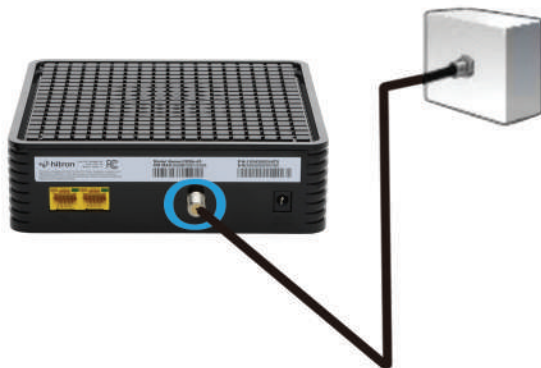

# 3

## CONNECT THE POWER ADAPTER TO THE MODEM


Connect the power adapter DIRECTLY from the wall outlet to the modem as indicated below.



# 4

## CONNECT THE MODEM TO THE ROUTER

Connect the ethernet cable from the modem's LAN port to the router's port as indicated below.

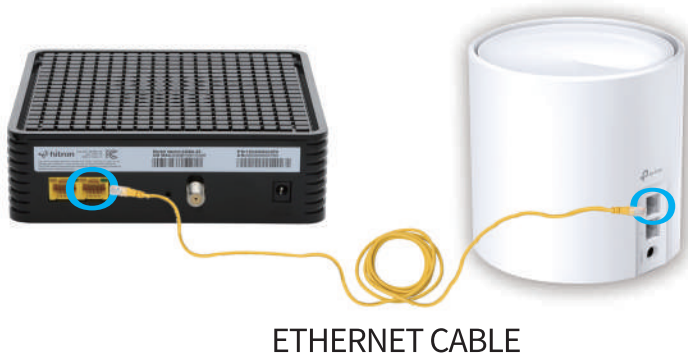

# 5

## CONNECT THE POWER ADAPTER TO THE ROUTER

Connect the power adapter DIRECTLY from the wall outlet to the router as indicated below.



# 6

## DOWNLOAD AND INSTALL THE DECO APP

Download the TP-Link Deco app for iOS or Android. The app will walk you through the setup.



### Need Help?

For answers to frequently asked questions (FAQs) and technical support, please go to

- <https://www.tp-link.com>
- Navigate to Deco's support page
- the Deco app

Swipe right at the main page and select Help from the menu.

To download the full manual, please visit:

### HITRON CODA-45

<https://www.carrytel.ca/download/coda45.pdf>

### TP-LINK DECO X20

<http://www.carrytel.ca/download/decox20.pdf>

If you need help to set up the equipment, please contact us at **647-560-4448** and go to Line 2 for Technical Support