

CHECK THE BOX CONTENTS

Look in the box and make sure you have the following:



SERCOTT DM1000



ETHERNET CABLE (RJ-45)



SERCOTT DM1000 POWER ADAPTER



TP-LINK DECO M4*



COAXIAL CABLE (OPTIONAL)



TP-LINK DECO M4 POWER ADAPTER*

*Quantity depends on user choice

QUICK START GUIDE

MODEM: SERCOMM DM1000

&

MESH WI-FI ROUTER: TP-LINK DECO M4

2

CONNECT THE MODEM TO THE CABLE OUTLET

Connect the coaxial cable from the modem to the cable outlet as indicated below.



3

CONNECT THE POWER ADAPTER TO THE MODEM


Connect the power adapter DIRECTLY from the wall outlet to the modem as indicated below.



4

CONNECT THE MODEM TO THE ROUTER

Connect the ethernet cable from the modem's LAN port to the router's port as indicated below.

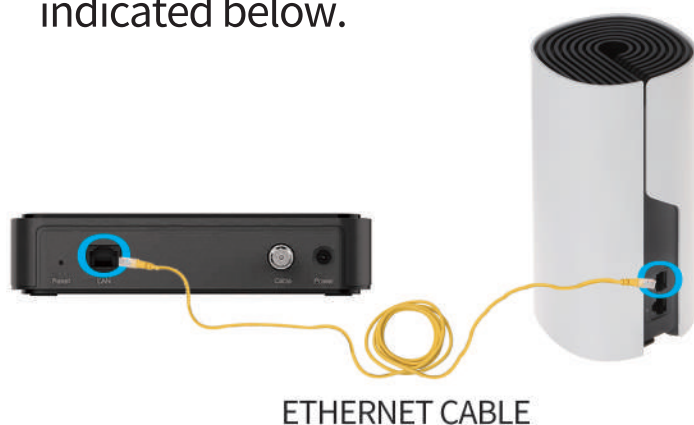

ETHERNET CABLE

5

CONNECT THE POWER ADAPTER TO THE ROUTER

Connect the power adapter DIRECTLY from the wall outlet to the router as indicated below.



6

DOWNLOAD AND INSTALL THE DECO APP

Download the TP-Link Deco app for iOS or Android. The app will walk you through the setup.



Need Help?

For answers to frequently asked questions (FAQs) and technical support, please go to

- <https://www.tp-link.com>
- Navigate to Deco's support page
- the Deco app

Swipe right at the main page and select Help from the menu.

To download the full manual, please visit:

SERCOTT DM1000

<https://www.carrytel.ca/download/sercommdm1000.pdf>

TP-LINK DECO M4

<http://www.carrytel.ca/download/decom4.pdf>

If you need help to set up the equipment, please contact us at **647-560-4448** and go to Line 2 for Technical Support