

QUICK START GUIDE

MODEM:
TECHNICOLOR TC4400

MESH WI-FI ROUTER:
TP-LINK DECO M4

1 CHECK THE BOX CONTENTS
Look in the box and make sure you have the following:



TECHNICOLOR TC4400



ETHERNET CABLE (RJ-45)



TECHNICOLOR TC4400 POWER ADAPTER



TP-LINK DECO M4*



COAXIAL CABLE (OPTIONAL)



TP-LINK DECO M4 POWER ADAPTER*

*Quantity depends on user choice

2 CONNECT THE MODEM TO THE CABLE OUTLET

Connect the coaxial cable from the modem to the cable outlet as indicated below.




3 CONNECT THE POWER ADAPTER TO THE MODEM

Connect the power adapter DIRECTLY from the wall outlet to the modem as indicated below.



4 CONNECT THE MODEM TO THE ROUTER

Connect the ethernet cable from the modem's LAN port to the router's port as indicated below.

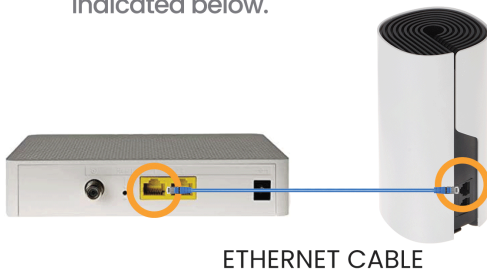

5 CONNECT THE POWER ADAPTER TO THE ROUTER

Connect the power adapter DIRECTLY from the wall outlet to the router as indicated below.



6 DOWNLOAD AND INSTALL THE DECO APP

Download the TP-Link Deco app for iOS or Android. The app will walk you through the setup.



Need Help?

For answers to frequently asked questions (FAQs) and technical support, please go to

- <https://www.tp-link.com>
- Navigate to Deco's support page
- [the Deco app](#)

Swipe right at the main page and select [Help](#) from the menu.

To download the full manual, please visit:

Technicolor TC4400

www.carrytel.ca/download/technicolortc4400.pdf

TP-LINK DECO M4

www.carrytel.ca/download/decom4.pdf

If you need help to set up the equipment, please contact us at 647-560-4448 and go to Line 2 for Technical Support